

Tent Set up Instructions

Coleman DUO DELUXE 2XL (Model 10780A)

To familiarise yourself with your new Coleman tent, it is recommended to set it up at home first before your camping trip. Please follow these set up instructions to obtain the best performance and longest life from your new Coleman Tent.

1. When you have selected your tent site, ensure that there are no sharp sticks or objects to puncture the tent floor and lay the inner tent on the ground.
2. Lay the inner tent in the position you want it, taking into account the fall of the land and the prevailing wind direction. Always place the tent with the front opening away from the wind. Be careful not to set up under trees which might drop sap or branches which can fall in heavy weather.
3. Assemble the tent poles ensuring the joiner fits completely into the opposing pole end.
4. The Coleman Pin and Ring construction method makes it easier to connect the poles to the tent before pegging the inner tent to the ground. This means that you can erect the inner tent and then move it to your preferred position.
5. Leave the doors fully zipped up before pegging out the inner tent.
6. Connect the two poles to the Pin at each corner and then connect the opposite end of each pole to the diagonal corner. This will form two curved poles to which you attach the inner tent.
7. Attach the inner tent by clipping the C clips to the poles and connect the top loop and toggle to support the apex of the inner tent to the frame.
8. Peg the inner tent down, driving the pegs into the ground at an angle of 45 degrees to the horizontal and sloping away from the tent pegging point.
9. Pull the fly over the frame and peg out the corner points of the fly, then peg out the remaining fly points ensuring an even look to the flysheet. Never over tighten a fly as it can stretch a seam which may cause leaks.
10. Attach the velcro attachments on the fly inner to the poles and guy out the attached guy ropes to complete the set up of your tent. These guy ropes assist in keeping the tent stable during windy conditions and should always be pegged out when the tent is erected.

Dismantling Your Tent

The dismantle process of the tent is the reverse of the preceding instructions and special care should be taken in removing the pegs (NEVER pull on the material to remove the pegs, use a peg remover) and make sure that the pegs and tent materials are dry and clean before packing away.

A wet tent will mildew quickly and will void your warranty.



The Outdoor Company™

Keeping your tent clean and dry and following these simple instructions will ensure you enjoy many pleasant camping experiences.

To prolong the life of your tent floor, you can put a separate sheet of tarp under your tent before set up.

Please read the tent care instructions attached inside the tent.

Made in China
2006-07