

Tent Set up Instructions

Coleman TRAVELLER 3 CV (Model 10100D)

To familiarise yourself with your new Coleman tent, it is recommended to set it up at home first before your camping trip. Please follow these set up instructions to obtain the best performance and longest life from your new Coleman Tent.

1. When you have selected your tent site, ensure that there are no sharp sticks or objects to puncture the tent floor and lay the inner tent on the ground.
2. Lay the inner tent in the position you want it, taking into account the fall of the land and the prevailing wind direction. Always place the tent with the front opening away from the wind. Be careful not to set up under trees which might drop sap or branches which can fall in heavy weather.
3. Sort the tent poles and assemble them making sure that the pole end fully inserts into the metal ferrule end to avoid splitting or breaking poles.
4. The Coleman Pin and Ring construction method makes it easier to connect the poles to the tent before pegging the inner tent to the ground. This means that you can erect the inner tent and then move it to your preferred position.
5. Leave the doors fully zipped up before pegging out the inner tent.
6. Connect the two GREY poles to the Pin at each corner and then connect the opposite end of each pole to the diagonal corner. This will form two curved poles to which you attach the inner tent.
7. Attach the inner tent by clipping the C clips to the poles and connect the top loop and toggle to support the apex of the inner tent to the frame.
8. Peg the inner tent down, driving the pegs into the ground at an angle of 45 degrees to the horizontal and sloping away from the tent pegging point.
9. Insert the YELLOW pole into the sleeve on the flysheet and locate the two pins at the front corner of the tent and connect the pole to these pins.
10. Pull the fly firmly over the frame and peg out the corner points of the fly. Never over tighten a fly as it can stretch a seam which may cause leaks.
11. Attach the velcro attachments on the inside of the fly to the poles and guy out the attached guy ropes to complete the set up of your tent. These guy ropes assist in keeping the tent stable during windy conditions and should always be pegged out when the tent is erected.
12. Your tent is fitted with Coleman's Circle Ventilation. It is important to guy out the appropriate points at the base of the fly to ensure maximum ventilation to the tent. You can control the flow of air into the tent by adjusting both the angle at which you guy out and how much you zip open the vent from the inner tent
13. Your tent is fitted with Coleman's AirPort System and is specifically designed to be used with a Coleman Cool Zephyr Window Fan. Refer to the instructions on how to attach your fan located on the inner of the tent at the AirPort. You can mount your fan inside your tent to pull in cool fresh air, or outside your tent to force hot still air out.



Dismantling Your Tent

The dismantle process of the tent is the reverse of the preceding instructions and special care should be taken in removing the pegs (NEVER pull on the material to remove the pegs, use a peg remover) and make sure that the pegs and tent materials are dry and clean before packing away.

It is easier to PUSH rather than PULL a fiberglass pole out of a sleeve on the fly sheet or inner tent.

A wet tent will mildew quickly and will void your warranty.

Keeping your tent clean and dry and following these simple instructions will ensure you enjoy many pleasant camping experiences.

To prolong the life of your tent floor, you can put a separate sheet of tarp under your tent before set up.

Please read the tent care instructions attached inside the tent.

**Made in China
2006-07**